



Wii Balance Board Foot Replacement

Use this guide to replace the feet on a Wii Balance Board.

Written By: Cory Olson



INTRODUCTION

This guide will demonstrate how to remove and replace the feet on the Wii Balance Board.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Unscrewing the Foot Cover



- Flip device upside-down so the plastic white board is facing the ground.
- Locate the four feet in the corners of the Balance Board.
- Unscrew the three 12.7 mm Philips screws from each foot cover.

Step 2 — Removing the Foot Cover



- Remove the grey plastic ring from the actual foot by lifting it up.

Step 3 — Removing the Foot



- Separate the loose foot from the device by lifting it up.

Step 4 — Removing the Additional Feet



- Repeat steps two and three on the remaining four feet.

To reassemble your device, follow these instructions in reverse order.